 
 
 



Master

  
RESETTABLE COMBINATION LOCK











- 4. Set the 3 dials to any combination you choose. Make sure each number appears clearly in the window. Record your combination – once the lock is set, there is no way to open it without the combination.
- Rotate the shackle 180° clockwise. The lock is now ready to be used with your new combination. To change the combination again, repeat steps 1-5.





